



PMM CZ Scorpion EVO 3 S1 Rear QD mounts Installation Instructions.

WARNING!

Prior to handling any firearm be sure that the weapon is cleared and is safe to work with, additionally if at any time you do not feel confident in doing the installation of any PMM product, PMM recommends you contact a licensed gunsmith for assistance.

Kit Components:

1x Rear PMM QD Mount

1x .1oz Loctite 242 Blue


1x PMM Shoulder Mount Bracket

1x 3mm-8mm T10 Torx Bolt

Installation of PMM rear QD mount:

Take the supplied PMM rear QD mount and place it into the frame of the Scorpion's corresponding rear sling mounting tang for the side you ordered (left or right). PMM recommends you **apply the supplied Loctite 242** to the T10 Bolt, then take the supplied Shoulder Mount Brackets with a T10 Bolt and Torx Wrench and lightly begin to tighten the bolts into position making sure your threads and the machined surfaces are lining up prior to tightening them down (**Image #1**).

Image #1

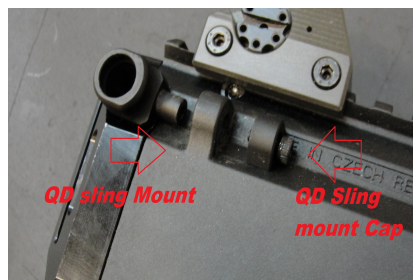

Final Note: Based on initial testing, all PMM supplied CZ Scorpion EVO S1 QD Mounts should fit the weapon system. If for any reason you are having issues with fitment of the mounts, please feel free to contact me. Additionally, please refer to the PMM website under **CZ Scorpion EVO 3 S1 Rear QD Sling Mount** for ways in which the rear QD Sling Mount can be used for corresponding sides, left or right.

For questions, visit us online at www.parkermountainmachine.com or contact us below at:

customerservice@parkermountainmachine.com

OR

(603)664-9606