



PMM SCAR LH QD mounts installation instructions.

WARNING!

Prior to handling any fire arm be sure that the weapon is cleared and is safe to work with, additionally if at any time you do not feel confident in doing the installation of any PMM product PMM recommends you contact a Licensed Gunsmith for assistance.

Kit Components:

1x Rear PMM QD Mount

1x .1oz Loctite 242 Blue

1x. PMM 6mm Shoulder Bolt

1x 3mm allen Wrench

1. Installation of LH PMM rear QD mount:

Proper installation of the PMM LH rear QD mount requires the Removal of the Rear folding site using a T25 Torx bit, please note the position in order to maintain a close zero for re-installation. With sight removed take the supplied PMM rear QD mount and slide it over the corresponding rear sling mount making sure the hole of the PMM LH rear QD mount aligns with the Sling plate hole. Take the PMM 6mm Shoulder bolt and add the **Loctite 242** to the tip of the bolt.

With the 3mm allen wrench lightly begin to thread the bolt into position making sure not to cross thread the mount and tighten ot down. As seen in **Image #1**.


Once the mount is installed make sure it is not loose and is horizontal with the upper of your rifle as seen in **Image #2**.

Lastly Re-install your Rear sight.

Image # 1.



Image# 2.

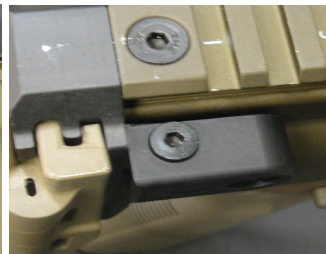

Final Note: Based on intial testing all PMM supplied QD mounts should fit both the 16 and 17 Weapon systems. If for any reason you are having issues with fitment of the mounts into the existing steel sling lugs please feel free to contact me below.

~Jarod.

E-mail jardo@parkermountaimmachine.com

P- (603)664-9606